
HX-VP1010 Series Installation Guide


Wiring and Circuit Diagram



Model HX-VP1010-xx-

Position

Velocity



See Table 1 at right for position input voltage.

hrack

2.18


The tachometer is self energizing and requires no input

Option Designator	Input Voltage
SI	4.9 to 30 VDC
SI5	5 ±0.5 VDC
SI12	12 ±0.5 VDC
SI15	15 ±0.5 VDC
SI24	24 ±1.0 VDC

With small blade type screwdriver (.105" max. blade width X .023" max. blade thickness), adjust the Zero and Span controls on the transducer to set the zero and maximum output voltages. Note: The Zero and Span controls are somewhat interactive and may require several iterations to obtain the desired zero and maximum voltage settings. Extend the transducer cable (on angular position transducers, rotate shaft) to the desired zero position (must be within 10% to 90% of the total range). Adjust the Zero control to give a zero voltage output. Then extend the cable (on angular position transducers, rotate shaft) to the desired maximum position in the direction of longest possible travel (either positive or negative) from the zero position. To obtain maximum output voltage magnitude this position must lie within 50% to 100% of the longest possible travel. Adjust the Span control to the output voltage magnitude required (+ or - 10 VDC maximum). Recheck the zero and span settings and readjust if necessary.

″В

Dimensional Information

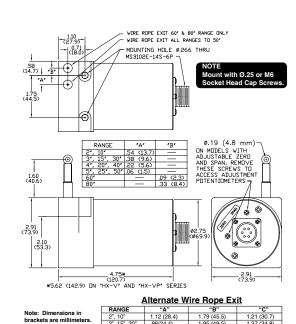

.96(24.4)

.64 (16.3

49 (12.4

.25 (6.4)

Alternate Wire Rope Exit

MOUNTING SURFACE

DUNTING HOLES

1 70 (45

1.95 (49.5)

2.27 (57.7

2.66 (67.6)

۶B

1.69 (42.9


1.84 (46.

2.08 (52.8

1.60 Н


(40.6)


ł

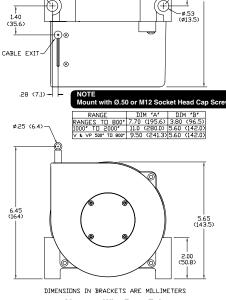

6.10 (155) 5.35 (136)

MS3102E-14S-6P-





4175 SW Research Way, Corvallis, Oregon, 97333 •Tel: (541) 757-3158 •Fax (541) 757-0858

F1

F3

Output Impedance 1.0 Ω max. Output Load.....5KΩ min. Velocity

Position

The tachometer is self energizing and requires no input voltage.

Excitation Voltage +15 & -15 VDC (±5%)